

## TOUCH-SCREEN SMART CODE CASE MANUAL



### 1. Product basic information:

Product Name: TLM Touch Screen Smart Code Case  
 Starting Mode: Gear Motor + Mechanical Drive  
 Working Temperature: -20°C~+70°C  
 User quantity: Admin 1, common users 10. Working Power Supply: 5#AA Alkaline Battery 4 pcs, inside code case within reach  
 Working Voltage: 3.8V-6.5V  
 Relative Humidity: 30%RH~85%RH  
 Password Length : 4-6 digits

### 2. Specification:

|                          |
|--------------------------|
| Specification (W*D*H) mm |
| <b>860×400×150</b>       |
| Assembly Size (W*D*H) mm |
| <b>860×400×150</b>       |


### 3. Accessory List:

- 1) Screw Package ( 8 pcs 4x16 KA screw)
- 2) Android Power Lead
- 3) Spare Key
- 4) 4 pcs of 5# Alkaline Battery

### 4. Function Instruction

| No. | Key Parts            | Instruction  |
|-----|----------------------|--|
| 1   | Storage Area         | Well organize items in different partition, orderliness and Convenient   |
| 2   | Touch Screen Area    | Tempered Glass Screen, gently touch screen 2 seconds to activate the system, set and input password;<br>BAT: remind low power<br>OK : Input right. Initial password: *1234#<br>ERR: input wrong, re-type again after 3 seconds |
| 3   | Reset button         | Set password or concealed button for reset, (*keep pressing reset button for 6 seconds, then restore system initialization) ( Position near OK inwards code case)  |
| 4   | Battery Box          | Equipped with batteries (pay attention on the direction of anode and cathode of batteries)   |
| 5   | Slide                | Silent, smooth, strong, thickened three-section ball-bearing slide   |
| 6   | Spare Key            | In the bottom of case, spare option to open the code case in mechanic way while electric controlling way doesn't work. Spare key should hide secretly. (Do not put the key inside code case)                                   |
| 7   | Android Supply Inlet | Spare power supply inlet (Without power charging function), Regular mobile 3.7V portable power source is applicative.  |


Functional Parts Diagram

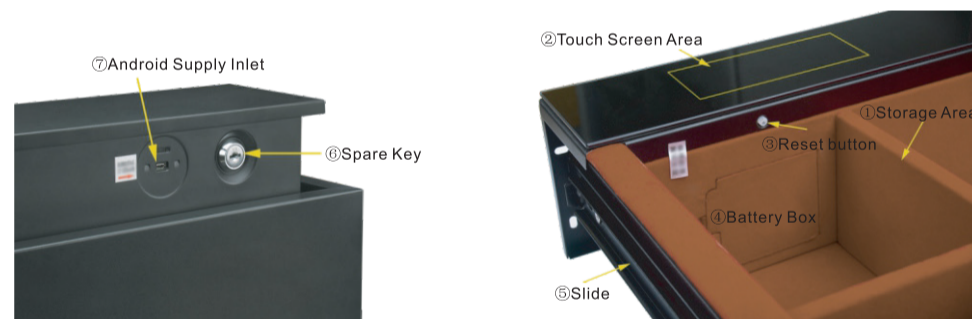

### 5. Assembly Step:

- (1) Assemble battery: Use spare key to open code case, and equip the batteries;
- (2) Separate the code case: open the drawer and take the inner drawer out, put aside. Please take good care of the lock and electrical equipment, do not toggle locker or other parts.
- (3) Assemble the outer case: Put the outer case inside the right position of drawer, fix the outer case onto the drawer sideboard with screw from inside of outer case in the right position, and fasten.
- (4) Put inner case into the drawer: slightly push the inner case into the drawer, aligned at the slide. Do not push hard.
- (5) Install the front board: Find the middle vertical line and fix two pcs of screw from inside, the distance between two screws is 64mm, then hang the front board onto the hole of inner case, close the drawer and check the position. Adjust the two screws to adjust the front board position, and fasten the screws.

Assembly Instruction:

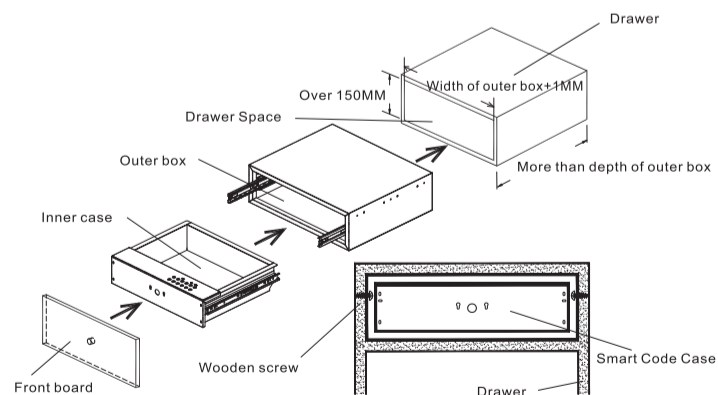

|    |                |                 |                         |            |             |      |     |            |
|----|----------------|-----------------|-------------------------|------------|-------------|------|-----|------------|
| 绘图 | 李玉媚/2019.11.16 | <b>NUOMI</b> 诺米 | 图号                      | D003542-03 | 变更内容        |      | 变更人 | 变更日期       |
| 校对 | 唐德兴/2019.11.16 |                 | 材质                      | 160克双胶纸    | 1           | 正式发行 | 李倩仪 | 2019.11.20 |
| 审核 | 黄丽诗/2019.11.16 |                 | 印刷                      | /彩色        | 2           |      |     |            |
| 批准 |                | 客户型号            | 箱型                      |            | 3           |      |     |            |
| 单位 | mm             | 物料名称            | 6043003智能触屏密码箱英文说明书(A4) | 物料编码       | 1.13.04.063 | 4    |     |            |
| 比例 | 1:1            |                 |                         | 产品规格       | 展开297×210mm | 5    |     |            |

## 6. Open Way:

- (1) Starting Mode: Pull out the drawer and touch any key to wake up the system till light on, enter \*1234#, then "OK" light on, inner case can pull out completely.
- (2) Unlock with password:
  - ① The first time unlock the code case, just need wake up the system and enter \*\*1234#. Set password and unlock the code case: enter 4-6 digits, or enter phantom password before or after password. Press "#"
  - ② then code case will open.,
  - ③ Password correct: "OK" lights on in green.
  - ④ Password wrong: "ERR" light flickers in red.

## 7. Change password:

- (1) Pull out the controlling panel part, touch any key to wake up the system, enter initial password\*\*1234#, open the code case.
- (2) press reset key
- (3) Enter initial password "1234#", "OK" light flickers, enter new password (require 4-6 digits)
- (4) Re-enter new password (double confirm)
- (5) The system enters stand-by mode means password is changed successfully.

## 8. Reset to defaults

- (1) Long press reset key over 5 seconds, stop after two short buzzing, system is emptied after one long buzzing. Then "OK" lights on 1 second, the system hibernating means the system recover initialization.
- (2) Alarm and Lock function If enter wrong password 5 times or above, "ERR" lights on 8 seconds, the system will be lock 60 seconds or alarm 30 seconds. While system lockdown, it won't feedback any operation, will recover after 60 seconds. While alarm, enter correct password to disable alarm., will recover after 30 seconds.
- (3) Tips: phantom password is available, maximum 20 digits effective.e.g.: correct password 23456 can replace with 96354112345625468432 After changing password, test the password before closing drawer.

## 9. Notes:

- (1) After using spare key, if want to pull out the key, need revolve the key to the original position.
- (2) Remind: Please pull out power supply wire or spare key on time after using spare power outlet or spare key, avoiding broken or other problems.
- (3) Touch any key, awakened mode, lights on and get in operation mode; Without any operation over 10 seconds, touch screen will automatically enter power saving mode.
- (4) There is soft-close silent structure, please close softly,

## 10. After-sales Service:

Dear User:

Thanks for purchasing our product! Please keep warranty card properly (Warranty Period 1 year).The below situations is not covered by the warranty:

- (1) Over one year warranty period
- (2) Damage cause by repair or disassembly by a non-our-company authorized maintainer.
- (3) Damage caused by abnormal usage, maintenance, storage, not following instruction.
- (4) Damage caused by human violence or force majeure factor.
- (5) No warranty card or effective invoice of production date and product certificate of qualification.
- (6) Unauthorized alternation of warranty card.
- (7) Item number on the warranty card is different with the product number.

♥ PS: Keep properly the spare key. Do not put in the code case.

## WARRANTY CARD

|                             |              |        |                     |      |
|-----------------------------|--------------|--------|---------------------|------|
| PRODUCT INFORMATION         | PRODUCT NAME |        | ITEM NO.            |      |
| CUSTOMER INFORMATION        | COMPANY NAME |        | CONTACT PERSON      |      |
|                             | ADDRESS      |        | TEL.                |      |
| MAINTENANCE RECORD          | FAULT        | RESULT | REPAIRMAN SIGNATURE | DATE |
|                             |              |        |                     |      |
|                             |              |        |                     |      |
| RETURNS OR EXCHANGES REASON |              |        |                     |      |

FOR PROTECT YOUR RIGHT, PLEASE FILL IN THE ABOVE FORM IN DETAILS. REGRET TO AFFECT YOUR USAGE. EVERY EXCHANGE OR RETURN, REPAIR WILL URGE OUR PRODUCT BETTER.WISH YOU GOOD LIFE!

1.13.04.063